	WI	Fitting	TOWBAR R89 For LANDROVER 90/110 ADJUSTABLE HEIGHT
-		Instructions	1984 – JULY 1998
MAT	ERIA	LS	
A 1 Adjustable Slider with international facing to ISO 3853 (BS AU114), wit		Adjustable Slider with international facing to ISO 3853	(BS AU114), with alternative coupling holes or
		mounting for four hole coupling.	· · · · -
A1	1	Main Support frame (provided with mountings for two e	lectrical sockets)
С	2	Side Bracing Arms	
D	4	M12 X 80mm Bolts, Nuts and Lock Washers	
D1	2	Spreader Plates	
Е	4	M10 X 25mm Bolts, Nuts and Lock Washers	
Р	2	Main Pins with safety clips	
СВ	2	M16 x 50mm Coupling Bolts, Nuts, Lock Washers	
FITT	ING		
1.	Loos	posely attach the Main Support (A1) to the holes provided in the rear frame with Bolts (D) using the Plates (D1) in front of	
	the f	irame.	
2.	110 MODELS: Attach Side Arms (C) to the existing bolt of the towing eye (fit towing eye on the outside of the chase		
	<u>90 N</u>	IODELS: Attach Side Arms (C) to the brackets welded on the cl	hassis with Bolts (E).
	Atta	ch to the base of the main bracket with Bolts (E).	
3.	Atta	Attach your coupling to the appropriate holes on the Slider (A) and ensure that both Pins (P) are used to attach to the Main	
	Sup	port, with locking clips fitted.	
4.	Fina	ally tighten all bolts.	
The	adjusta	able slider maybe moved up on the support when not towing to i	mprove ground clearance.
DI	co rof	fer to the vehicle specification for the trailer weight and not	se limits, which must be observed

