



Fitting Instructions

TOWBAR HY59
For Hyundai Santa Fe
April 2006 -

MATERIALS

A	1	Cross Bar
B	1	Left Side arm
C	1	Right Side arm
D	2	Large Spreader Plate
E	4	Small Spreader Plate
F	4	M10 x 35 x 1.25mm Fine Pitch Bolts and Lock Washers
G	4	M12 x 120 x 1.75mm Bolts, Nyloc Nuts and Flat Washers (30mm O.D.)
H	6	M12 x 35mm Bolts, Nyloc Nuts and 12 x Flat Washers (30mm O.D)
J	1	Neck Assembly
K	4	M12 x 30 x 1.75 Bolts, and Nyloc Nuts
ZE	1	Electrical Plate (ZEP2)


FITTING

1. Remove spare wheel, remove both rear silencers and remove both rear heat shields.
2. Unclip Fog lamp wiring from bumper crash beam and cut out four connecting plates as shown in photograph below.
3. Loosely attach sidearms (B) & (C) using fixings (F) & (G) with spreader plates (D) & (E) in position.
4. Insert Cross Bar (A) into crash beam and loosely attach to sidearms (B) & (C) using fixings (H). Tighten all bolts.
5. Cut exhaust heat shields to clear towbar side arms and re-fit. Re-fit exhaust silencers (Note: It is recommended that the exhaust gaskets are replaced). Re-fit spare wheel.
6. Attach Neck (J) and Electrical Plate (ZE) using fixings (K).
7. Fully Tighten all fixings.


Note:

Please refer to the vehicle specification for the trailer weight and nose limits, which **must be observed**.

Recommended torque settings: M8 - 27Nm, M10 - 53 Nm, M12 - 95 Nm, M14 - 150 Nm, M16 - 214 Nm

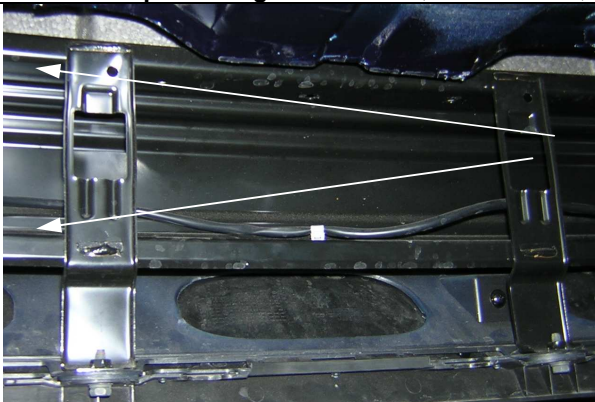

Remove four connecting plates by cutting at points shown.

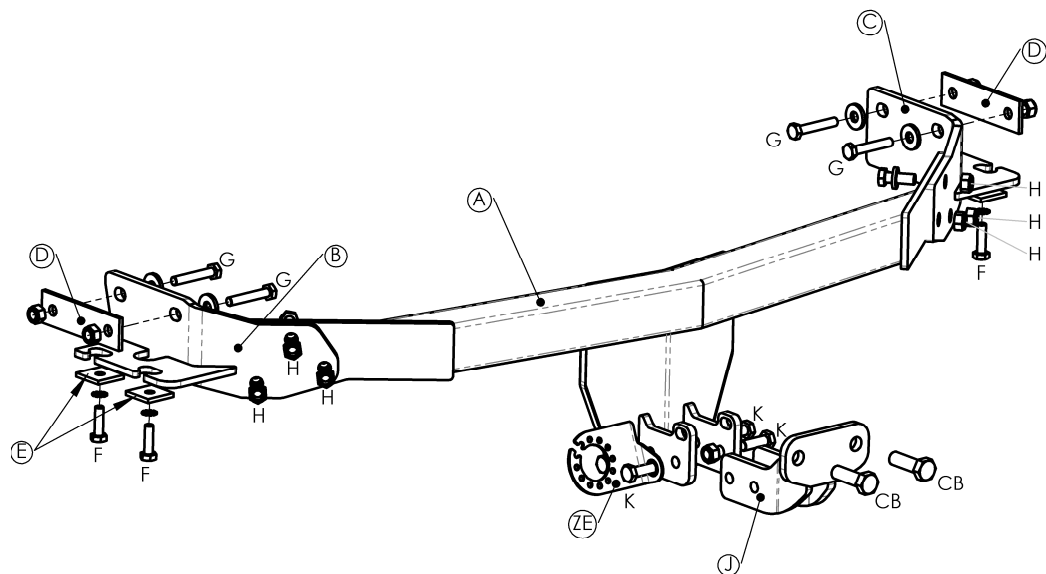



Notice de Montage

ATTELAGE HY59
Pour Hyundai Santa Fe
Avril 2006 -

MATERIELS

A	1	Traverse principale
B	1	Bras latérale gauche
C	1	Bras latérale droite
D	2	Grande entretoise
E	4	Petite entretoise
F	4	Boulons a petit pas M10 x 35 x 1.25mm et rondelles freins
G	4	Boulons M12 x 120 x 1.75mm écrous Nyloc et rondelles plates (Ø30mm).
H	6	Boulons M12 x 35mm, boulons Nyloc et 12 x rondelles plates (Ø30mm).
J	1	Ferrure
K	4	Boulons M12 x 30 x 1.75 et boulons Nyloc
ZE	1	Support plaque électrique (ZEP2)


MONTAGE

1. Retirer la roue de secours, les deux silencieux du pot d'échappement et les deux boucliers thermique.
2. Déclipser du traverse de pare-chocs le faisceau de l'antibrouillard du renfort de pare-chocs et découper les 4 plaques de fixation comme indiqué sur la photo ci-dessous.
3. Sans serrer, attacher les bras latéraux (B et C) en utilisant la visserie (F et G) avec entretoises (D et E) en position.
4. Insérer la traverse principale (A) dans la traverse du pare-chocs et sans serrer attacher les bras latéraux (B) & (C) en utilisant la visserie (H). Serrer toute la visserie au couple de serrage recommandé.
5. Découper les boucliers thermique afin d'éviter les bras latéraux et remonter en position. Remonter les silencieux (Remarque : il est recommandé de remplacer les supports du pot d'échappement). Remonter la roue de secours.
6. Attacher la ferrure (J) et plaque électrique (ZE) avec la visserie (K).
7. Serrer toute la visserie au couple de serrage recommandé

Remarque:

Please refer to the vehicle specification for the trailer weight and nose limits, which **must be observed**. Veuillez vous reporter aux données techniques du véhicule pour les limites de masse tractable et du poids admis sur la boule,

Couple de serrage recommandé: M8 - 27Nm, M10 - 53 Nm, M12 - 95 Nm, M14 - 150 Nm, M16 - 214 Nm

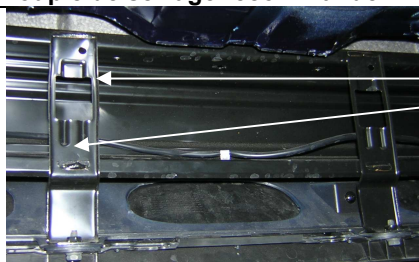

Découper les 4 plaques de fixation aux points indiqués

