



Fitting Instructions

For Autotrail Motorhomes: **MHA4U**
Tracker RS model (2012-) (15CHA0110)

MATERIALS:

A	1	Crossbar
B	1	Sidearm
C	1	Sidearm
D	2	Washer Plate
X	12	M12 x 30 x 1.75 Bolts & Nyloc Nuts
Y	4	M12 x 35 x 1.75 Bolts & Nyloc Nuts
ZE	1	Retractable Electrical Plate
ZN	1	Neck Kit.


FITTING:

Note: On 2014 Models, electrical fixings may need to be relocated if they interfere with Sidearm (B & C) fitment to the chassis.

1. Insert Sidearm (B) into the chassis opening along with a Washer Plate (D). Loosely attach to the inner face of the chassis using fasteners (X). Follow the same process to attach Sidearm (C) and Washer Plate (D) to the other chassis.
2. Loosely attach Crossbar (A) to Sidearms (B & C) using fasteners (Y).
3. Assemble the Neck Kit (ZN) and Electrical Plate Kit (ZE) to Cross Bar (A) using fasteners and instructions from the relevant kits.
4. **Fully Tighten all Fasteners to recommended torque settings.**

Recommended torque settings:

Grade 8.8 bolts: M12 - 80 Nm, M16 - 200 Nm

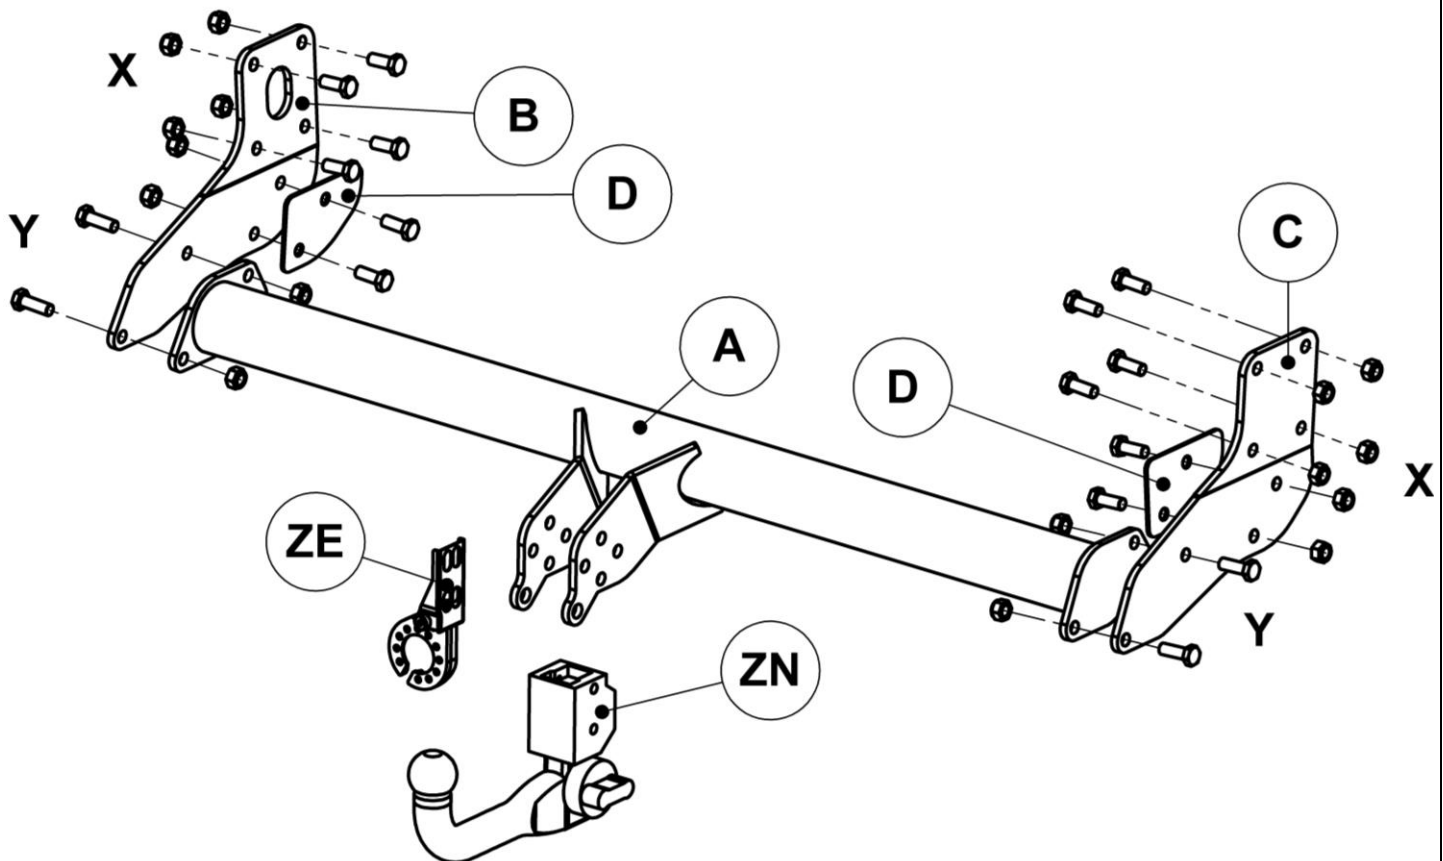

W0001MHA4U-FIT\$011412110000