



# Fitting Instructions

For Autotrail Motorhomes:  
Frontier Range (2017-)

MHK2U

## MATERIALS:


- A 1 Crossbar
- B 2 Sidearm
- C 4 M12 x 40 x 1.75 Bolts, Nyloc Nuts & Flat Washers (40mm O.D.)
- D 6 M12 x 35 x 1.75 Bolts & Nyloc Nuts
- ZE 1 Retractable Electrical Plate
- ZN 1 Chosen Neck Kit (Detachable shown)

## FITTING:

1. Loosely attach Sidearms (**B**) to the outer face of each chassis rail using fasteners (**C**).
2. Loosely attach Crossbar (**A**) to each Sidearm (**B**) using fasteners (**D**).
3. Attach the Neck Kit (**ZN**) and Electrical Plate Kit (**ZE**) to Cross Bar (**A**) using fasteners and instructions from the relevant kits.
4. Align the bar so that there is clearance between the towbar and the valance (>5mm). Some vehicles may require a small cut to the bumper.
5. **Fully tighten all fasteners to their recommended torque settings.**

## Recommended torque settings:

Grade 8.8 bolts: M12 - 95 Nm

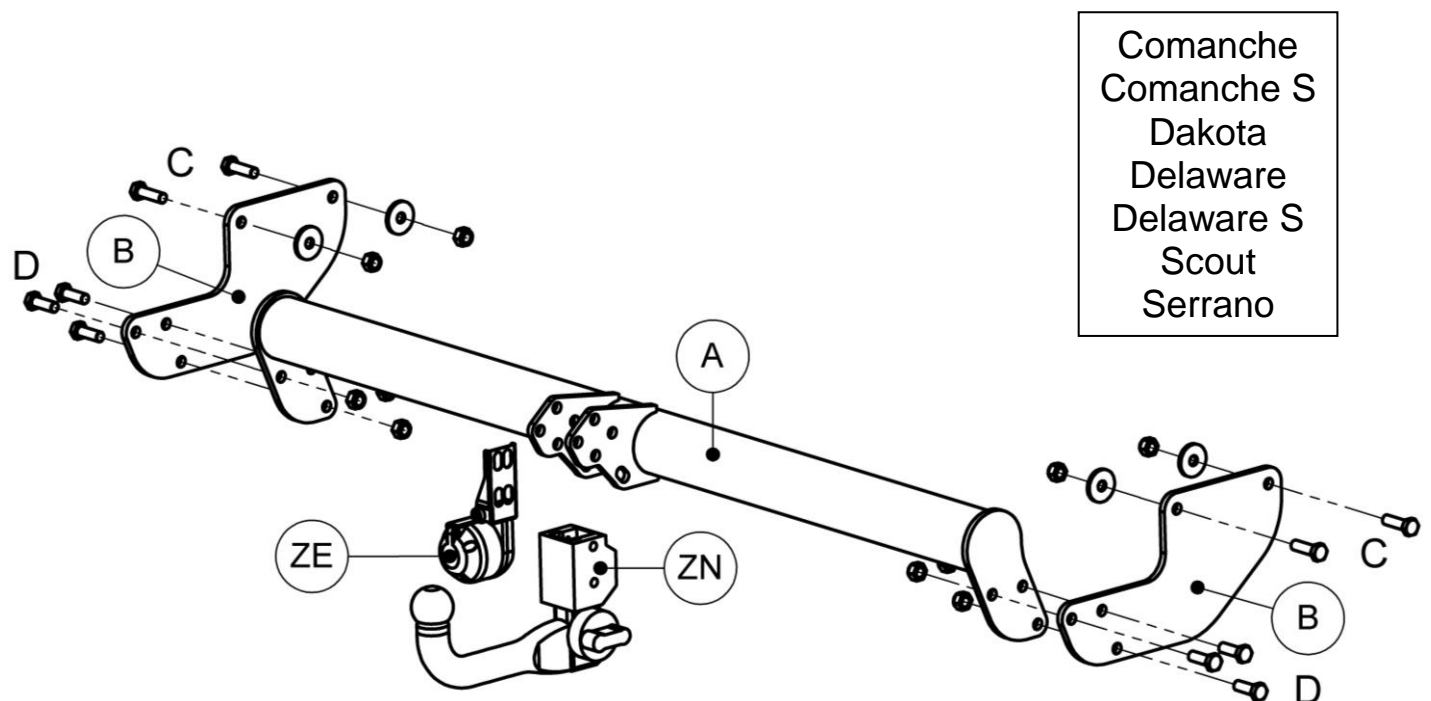

W 0001MHK2U-FIT\$011210160000