



Fitting Instructions

TOWBAR
For Renault Kangoo RN108U
2009-
For '2008' Series Necks


MATERIALS

- A 1 Cross bar 1
- B 1 Side Bracket (L.H. Side)
- C 1 Side Bracket (R.H.Side)
- D 4 M10 x 40x 1.50 mm Bolt (Grade 10.9), Flat Washer (25 mm O.D.) and Lock Washers.
- E 2 M8 x 35 x1.25 Set Bolt (Grade 10.9), Flat Washers (25 mm O.D.) and Lock Washer.
- F 4 M12 x 45x 1.75 mm Bolt, Flat Washers (25 mm O.D.) and Nyloc Nuts.
- G 1 ZEP2 Electrical plate
- H 1 Safety chain Bracket
- ZQ 1 ZQ Detachable Illustrated

FITTING

1. Remove two rear bumper tag screws and bend tags down, remove 1 underside arch screw each side.
2. On left side of vehicle fit side arm (B) to chassis rail using fasteners D & E., leave loose.
3. On right side undo fixings for exhaust bracket and discard. Holding the exhaust bracket back up fit side arm (C) using fasteners D & E. and leave loose.
4. Carefully feed Crossbar (A) over the exhaust and loosely attach to the sidearm (B & C) using fixings (F).Should extra clearance be required undo the rear silencer from its exhaust rubber and leave to hang on chassis rail.
5. **Fully tighten all remaining fixings to the recommended torque settings starting** with side arms, continuing with main cross bar holding the part in its highest position.
6. Attach the chosen Neck to Cross Bar (A) using fasteners provided in the Neck kit, with Electrical Plate (G) and Safety chain bracket (H)
7. Refit all vehicle fixings and refit bumper tags.

Note: This towbar must be used with either a Witter Towball (part number Z11) or Class A50-1 or A50-X towball dimensionally Conforming to A50-1 with a 'D' and 'S' value greater than or equal to that of the towbar. Please refer to the vehicle specification for the trailer weight and nose limits, which **must be observed. Recommended torque settings:** Grade 8.8 bolts: M10 - 53 Nm, M12 - 95 Nm, M16 - 214 Nm **Grade 10.9:** M10 – 78Nm, M8 – 35Nm.

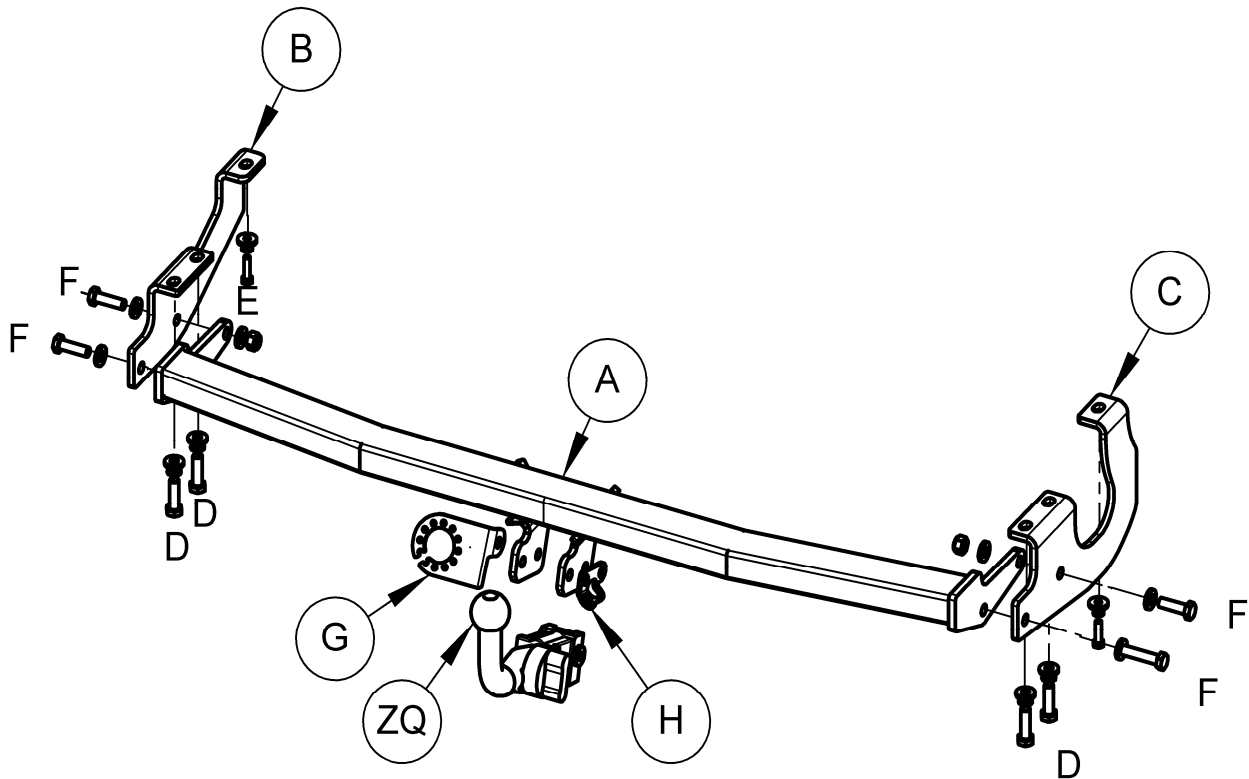

W0001RN108-FIT\$011103080000