



# Fitting Instructions

TOWBAR **VW44A**  
For **VOLKSWAGEN POLO CLASSIC,**  
**VARIANT, SEAT CORDOBA SALOON &**  
**VARIO, (All Large Bumper Models) 1996-**  
**IBIZA 1996 - 2000**

## MATERIALS

A	1	Cross Bar with European facing to 94/20/EC – A50-1
D	4	M10 x 35 x 1.5mm Bolts, Lock Washers and 2 Nuts
E	2	Side Arms (1 off each hand)
E1	2	Spacer Plates
F	2	M10 x 35 x 1.5mm Bolts, Lock Washers and Large Flat Washers (40mm O.D.)
G	1	Left Hand Side Arm Extension
G1	1	Spreader Plate (1 Nut)
H	1	Right Hand Side Arm Extension
H1	1	Spreader Plate (2 Nuts)
J	2	M10 x 80 x 1.5mm Bolts, Nuts, Lock Washers and 4 Large Flat Washers (40mm O.D.)
K	3	M8 x 30 x 1.25mm Bolts, Lock Washers and Flat Washers (25mm O.D.)
L	1	ZEP35 Electrical plate (not shown)
CB	2	M16 x 50mm Bolts, Nuts and Lock Washers

## FITTING

1. Remove bumper (tip screws, bolts across top edge and screws on lower edge). Remove plastic under-tray. Remove bumper beam. Release left hand exhaust heat shield fixing and bend heat shield down. On right hand side remove tape covering holes for Bolts (K) and also large rubber grommet. On left hand side remove tape covering hole for Bolt (K).
2. Insert Side Arms (E) into chassis and loosely attach Cross Bar (A) to Side Arms (E) using Bolts (D). With Side Arms (E) central in mounting points drill up through rearmost holes into boot floor. NOTE: Ensure carpet and trim is removed from top of chassis.
3. Insert Bolts (J) from inside vehicle with Large Flat Washers. (On Seat Ibiza, insert Spacer Plates (E1) between Side Arms (E) and top of chassis). Loosely attach Side Arm Extensions (G) and (H) to Bolts (J) with Large Flat Washers on under side. Attach Side Arm Extensions (G) and (H) to Side Arms (E) using Bolts (F). NOTE: On Seat Ibiza Side Arm Extensions (G) and (H) are not used.
4. On right hand side insert Spreader Plate (H1) through large hole on underside of chassis and attach to Right Hand Side Arm Extension using Bolts (K). On left hand side insert Spreader Plate (G1) into chassis and attach to Left Hand Side Arm Extension using remaining Bolt (K). Tighten all bolts.
5. Re-fit heat shield and under-tray. Cut bumper as shown below. Re-fit bumper.

**Note:** This towbar must be used with either a Witter Towball (part number Z1) or Class A50-1 or A50-X towball dimensionally Conforming to A50-1 with a 'D' and 'S' value greater than or equal to that of the towbar.

Please refer to the vehicle specification for the trailer weight and nose limits, which **must be observed**.


**Recommended torque settings:** M8 - 27Nm, M10 - 53 Nm, M12 - 95 Nm , M14 - 150 Nm, M16 - 214 Nm





# Fitting Instructions

TOWBAR VW44A  
For VOLKSWAGEN POLO CLASSIC,  
VARIANT, SEAT CORDOBA SALOON &  
VARIO, IBIZA (All Large Bumper Models)  
1996-

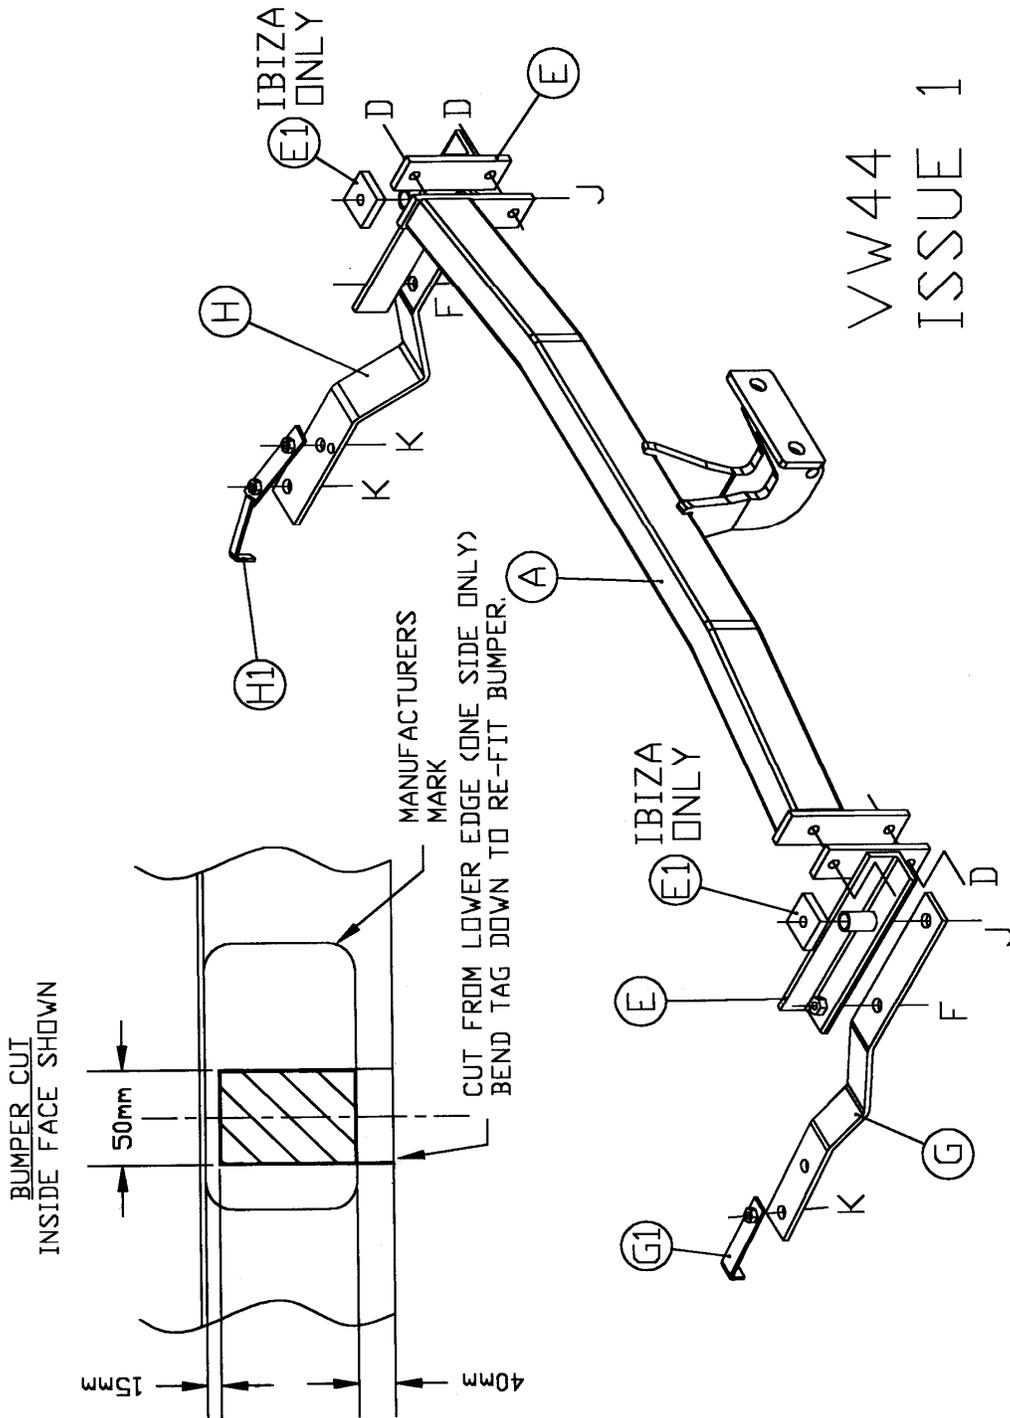

VW44  
ISSUE 1